



Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

| Code      | Fig No. | Qty | Description                | Code      | Fig No. | Qty | Description                 | Code      | Fig No. | Qty | Description             |
|-----------|---------|-----|----------------------------|-----------|---------|-----|-----------------------------|-----------|---------|-----|-------------------------|
| 143901    | 1       | 1   | Sprinkler Body             | 143928a   | 28a     | 2   | Screw                       | 140374a   | 54      | 1   | Washer                  |
| 143902kit | 02      | 1   | External Body              | 143928b   | 28b     | 2   | Nut                         | 140126    | 55      | 2   | Screw                   |
| 143903kit | 03      | 1   | Internal Body              | 143929    | 29      | 1   | Principal Pipe              | 140115a   | 56      | 2   | Nut                     |
| 143903b   | 3b      | 1   | O-Ring                     | 143929a   | 29a     | 1   | O-Ring                      | 143957    | 57      | 2   | Knob                    |
| 140368    | 4       | 1   | Grease Nipple              | 143930    | 30      | 1   | Washer                      | 143958    | 58      | 4   | Plate For Counterweight |
| 143906    | 6       | 1   | O-Ring                     | 143931    | 31      | 1   | Fastener Ring               | 143958a   | 58a     | 4   | Internal Plate          |
| 143908    | 8       | 1   | U-Packing                  | 143932    | 32      | 2   | Spacer For Inversion Shaft  | 143959    | 59      | 4   | Screw                   |
| 140112    | 10      | 24  | Sphere                     | 143933kit | 033     |     | Complete Support            | 140128a   | 60      | 4   | Nut                     |
| 143911    | 11      | 1   | Brake                      | 143933    | 33      | 1   | Arm Support                 | 143961    | 61      | 1   | Arm Stroke Regulator    |
| 143912kit | 012     | 1   | Complete Support Arm       | 143934    | 34      | 2   | Screw                       | 143962    | 62      | 1   | Arm Spring              |
| 143912    | 12      | 1   | Arm Support                | 140353a   | 35      | 2   | Nut                         | 143963    | 63      | 1   | Shaft For Regulator     |
| 143912b   | 12b     | 2   | Bushing                    | 143936kit | 036     | 1   | Complete Lever              | 143964    | 64      | 1   | Shaft                   |
| 143913kit | 013     | 1   | Complete Arm               | 143936    | 36      | 1   | Inversion Lever             | 143965    | 65      | 1   | Variable Body           |
| 143913    | 13      | 1   | Arm                        | 143937    | 37      | 1   | Clamp For Inversion Lever   | 143966kit | 066     | 1   | Complete Clamp          |
| 143914    | 14      | 1   | Arm Shaft                  | 140363    | 38      | 1   | Screw                       | 143966    | 66      | 1   | Clamp For Pipe          |
| 143914a   | 14a     | 2   | Locking Nut                | 140137    | 39      | 3   | Screw                       | 143967    | 67      | 2   | Screw                   |
| 141915    | 15      | 1   | Spoon                      | 140137a   | 40      | 3   | Nut                         | 143967a   | 67a     | 2   | Nut                     |
| 140363    | 15a     | 3   | Screw                      | 141941    | 41      | 1   | Inversion Spring            | 143967b   | 67b     | 2   | Washer                  |
| 140137a   | 15b     | 3   | Nut                        | 143942    | 42      | 2   | Bearing                     | 144152    | 68      | 2   | Screw                   |
| 143916    | 16      | 1   | Nut                        | 140137a   | 43      | 2   | Nut                         | 143969    | 69      | 1   | O-Ring                  |
| 140117    | 17      | 1   | Nozzle Locking Ring        | 140329a   | 43a     | 2   | Washer                      | 143970    | 70      | 4   | Stud Bolt               |
| 143918    | 18      | 3   | Main Nozzle                | 143944    | 44      | 1   | Reversing Lever Bar         | 140185a   | 70a     | 4   | Nut                     |
| 140114a   | 19      | 1   | Packing For Nozzle         | 143945    | 45      | 1   | Clamp Lever Inversion       | 140185b   | 70b     | 4   | Washer Grower           |
| 143920    | 20      | 2   | Ball Bearing               | 140363    | 46      | 2   | Screw                       | 143971kit | 071     | 1   | Brake Screw             |
| 143921    | 21      | 2   | Ball Bearing               | 140135kit | 047     | 1   | Return spring kit           | 140164    | 73      | 1   | Nut For Brake           |
| 143922    | 22      | 1   | Short Spacer               | 140135kit | 47      | 1   | Return fork lever (047)     | 140164a   | 74      | 1   | Brake Spring            |
| 143923    | 23      | 1   | Medium Spacer              | 140135kit | 48      | 1   | Return tapered spring (047) | 140165    | 75      | 2   | Pin                     |
| 143924    | 24      | 1   | Long Spacer                | 143949    | 49      | 1   | Screw                       | 143976    | 76      | 1   | Brake Dowel Pin         |
| 143925    | 25      | 2   | Gasket For Arm Shaft       | 143950    | 50      | 1   | Nut                         | 143976a   | 76a     | 1   | Nut                     |
| 143926    | 26      | 1   | Gasket For Inversion Shaft | 143951    | 51      | 1   | Shaft For Clamp Lever       | 143980    | 80      | 2   | Inversion Ring          |
| 143927    | 27      | 1   | Gasket For Inversion Shaft | 143952    | 52      | 2   | Bearing                     | 143981    | 81      | 1   | Cam                     |
| 143928kit | 028     | 1   | Pipe-Head                  | 140374    | 53      | 1   | Plug                        | 143981a   | 81a     | 2   | Screw                   |

