



Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
144001	1	1	Sprinkler Body	144022	22	1	Short spacer	140135kit	47	1	Return fork lever (047)
140102kit	02	1	Body support	144023	23	1	Medium spacer	140135kig	48	1	Return tapered spring (047)
140102a	2a	4	Connector stud bolt	144024	24	1	Long spacer	144049	49	1	Screw
1401022b	2b	4	Nut	144025	25	2	Gasket for arm-shaft	140137a	50	1	Nut
140103kit	03	1	Brake ring	144026	26	1	Gasket for inversion shaft	144051	51	1	Shaft for clamp lever
140103a	3a	1	Ball bearing crown	144027	27	1	Gasket for inversion shaft	144052	52	2	Bearing
140125a	3b	1	O-ring	144028	28	1	Pipe head	140153	53	1	Plug
140104	4	1	Ferrule	140115	28a	2	Bolt Locking Ring	140374a	54	1	Washer
140117a	4a	1	Screw	144028b	28b	2	Nut	140146	55	2	Screw
140104a	5	1	Central ring	144029	29	1	Principal pipe	140115a	56	2	Nut
140112a	6	1	Lower Body O'Ring	144029a	29a	1	O-ring	144057	57	2	Knob
140113a	7	1	O-ring	144030	30	1	Washer	144058	58	8	Plate for counterweight
140113	8	1	U-pack Seal Ring	144031	31	1	Fastener ring	144059	59	4	Screw
140124a	9	1	Ball bearing ring	144032	32	2	Spacer for inversion shaft	140128a	60	4	Nut
140112	10	60	Sphere	144033kit	033	1	Complete support	144061	61	1	Arm stroke regulator
140111	11	1	Brake	144033	33	1	Arm support	144062	62	1	Arm spring
144012kit	012	1	Complete support arm	144034	34	2	Screw	144063	63	1	Shaft for regulator
144012	12	1	Support arm	140128a	35	2	Screw	144064	64	1	Shaft
144012b	12b	2	Bush for support	144036kit	036	1	Nut	140180	65	1	Variable body
144013kit	013	1	Complete arm	144036	36	1	Inversion lever	144066kit	066	1	Complete clamp
144013	13	1	Arm	144037	37	1	Clamp for inversion lever	144066	66	1	Clamp for pipe
144014	14	1	Arm shaft	140363	38	1	Screw	140182	67	2	Pipe Clamp Bolt
144014a	14a	2	Locking nut	140137	39	3	Screw	140182a	67a	2	Pipe Clamp Nut
141915	15	1	Spoon	140137a	40	3	Nut	140182b	67b	2	Pipe Clamp Washer
140363	15a	3	Screw	141941	41	1	Inversion spring	140183	68	2	Screw
140137a	15b	3	Nut	144042	42	2	Bearing	140184	69	1	O-ring
144016	16	1	Lock nut	140137a	43	2	Nut	140185	70	4	Stud bolt
140117	17	1	Nozzle lock ring	140329a	43a	2	Washer	140185a	70a	4	Nut
214800	18	3	Main Nozzle	144044	44	1	Reversing lever bar	140185b	70b	4	Washer grower
140114a	19	1	Nozzle O'Ring	144045	45	1	Clamp lever inversion	140163kit	071	1	Brake screw
144020	20	2	Ball bearing	140363	46	2	Screw	140164	73	1	Nut for brake
144021	21	2	Ball bearing	140135kit	047	1	Return spring kit	140164a	74	1	Brake spring

